



FocalPoint™ Projection Screen by Draper—Assembly Map

60" x 80" (152 x 203 cm) Image Area—4:3 Format

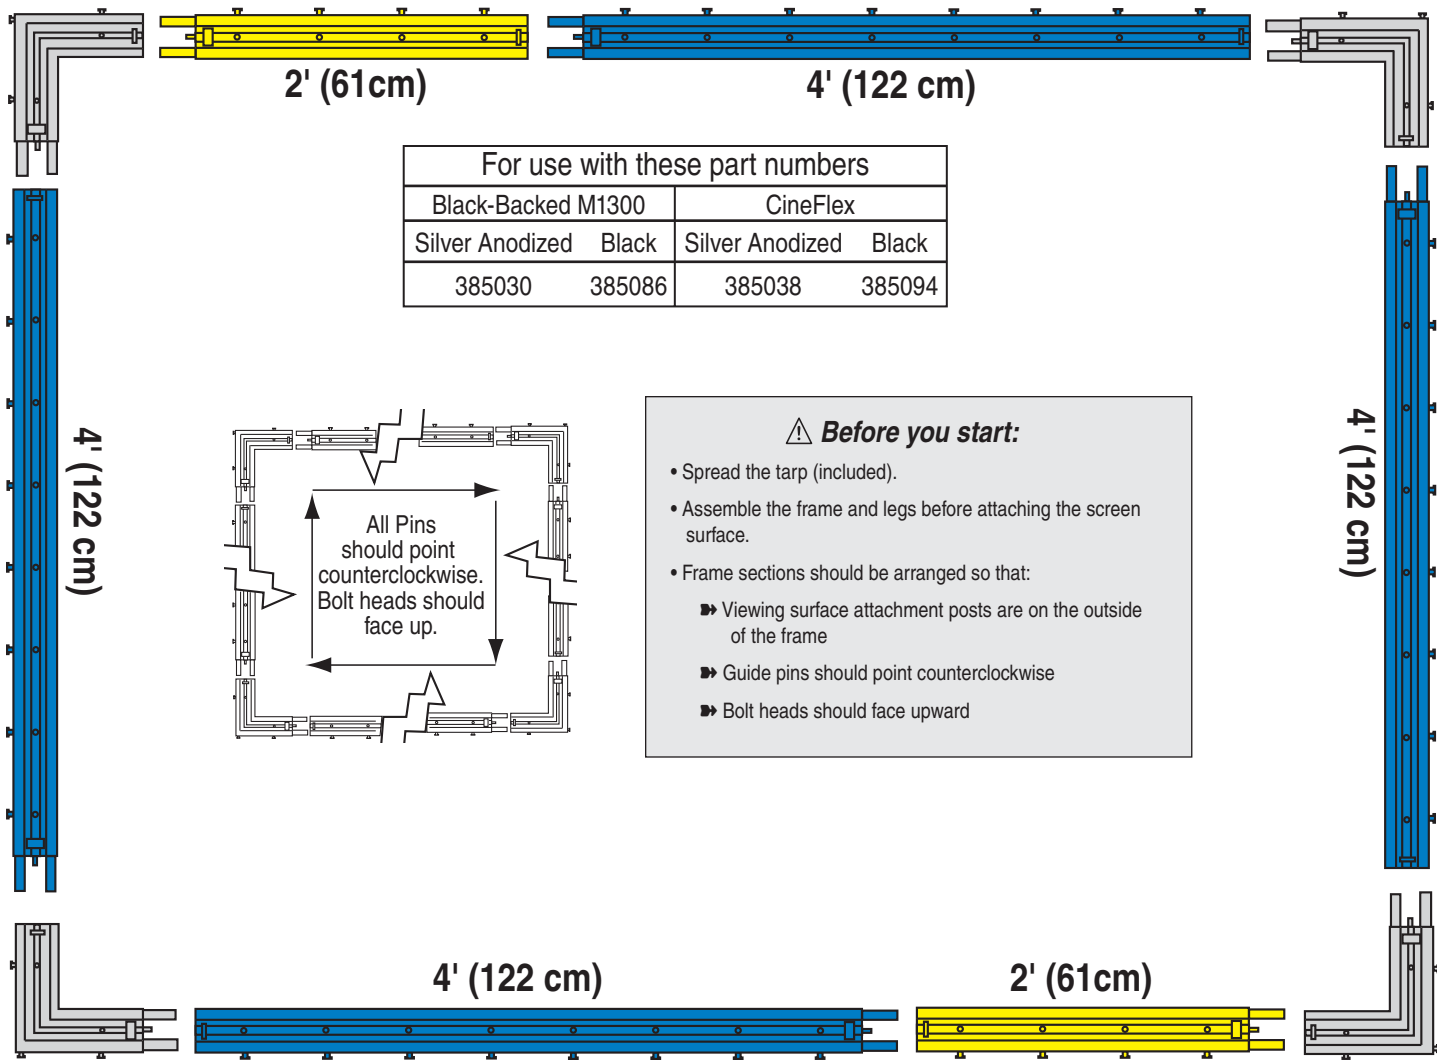

For use with these part numbers

Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385030	385086	385038	385094

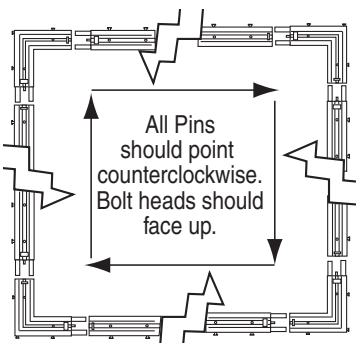


⚠ Before you start:

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
 - ▶ Viewing surface attachment posts are on the outside of the frame
 - ▶ Guide pins should point counterclockwise
 - ▶ Bolt heads should face upward

Leg Kit A (two legs per screen)

- Leg Kit A—**
For use with screens up to 80" high viewing area
- Leg Kit B—**
For use with screens up to 126" high viewing area
- Leg Kit C—**
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

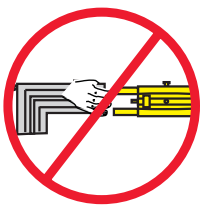

⚠ Caution:
Beware of pinch points.

