


# FocalPoint™ Projection Screen by Draper—Assembly Map

## 72" x 96" (183 x 244 cm) Image Area—4:3 Format

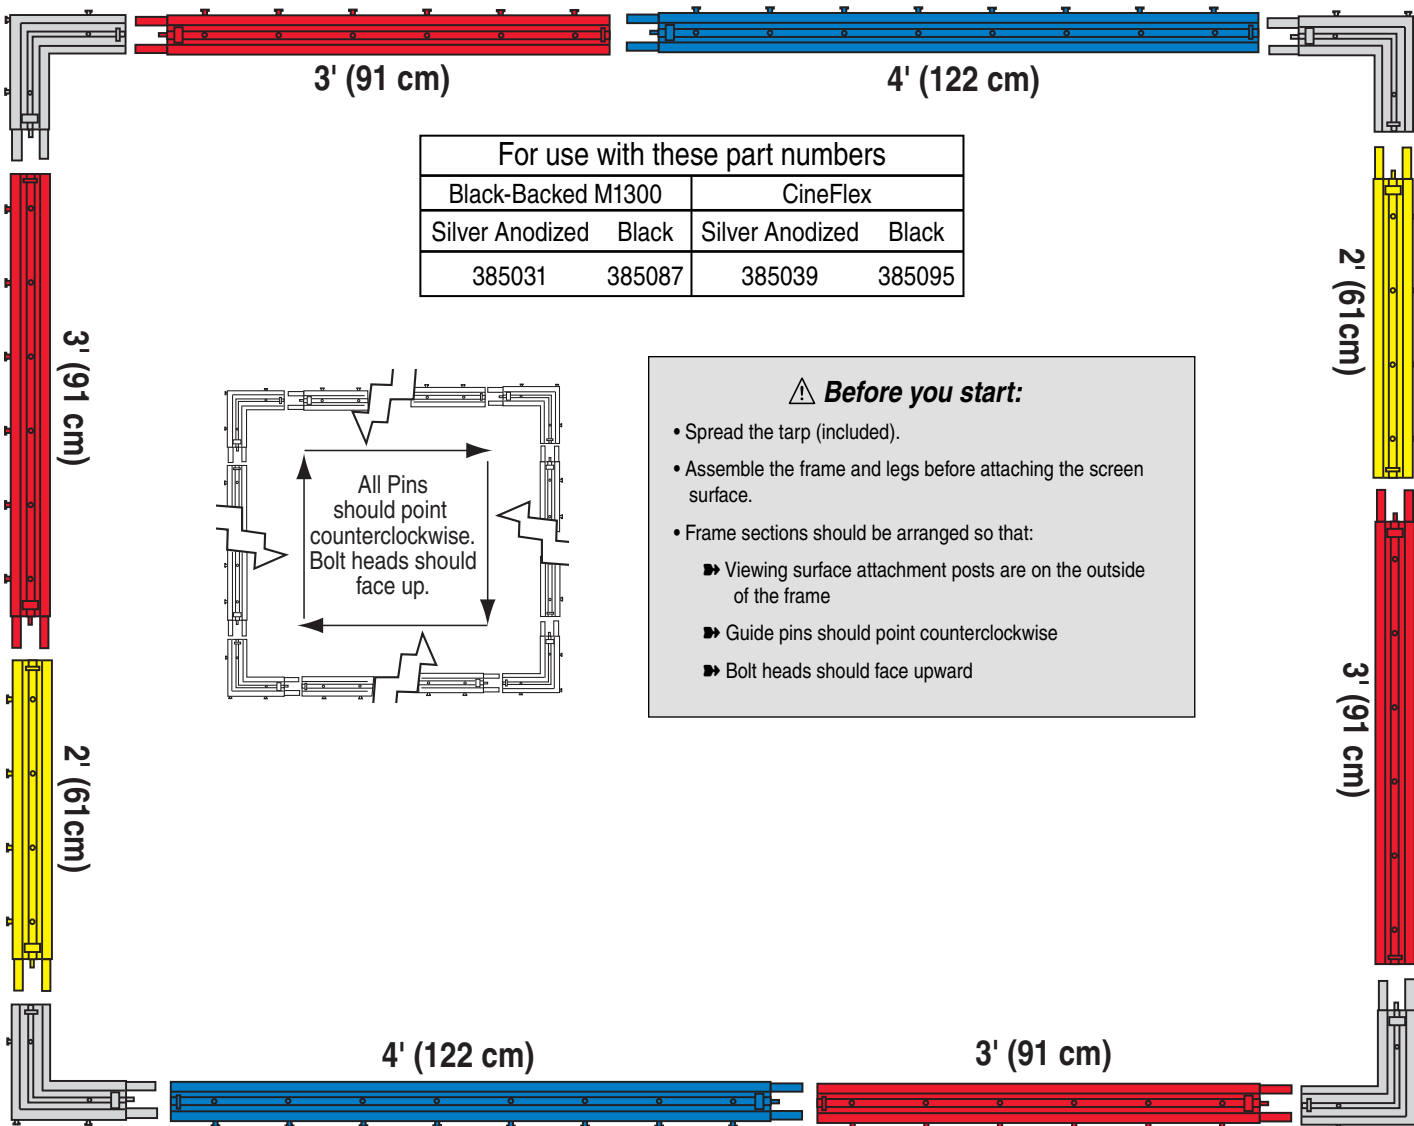

For use with these part numbers			
Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385031	385087	385039	385095

**⚠ Before you start:**

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
  - ➔ Viewing surface attachment posts are on the outside of the frame
  - ➔ Guide pins should point counterclockwise
  - ➔ Bolt heads should face upward

### Leg Kit A (two legs per screen)

**Leg Kit A—**  
For use with screens up to 80" high viewing area

**Leg Kit B—**  
For use with screens up to 126" high viewing area


**Leg Kit C—**  
For use with screens above 126" high viewing area

Leg Kits come with Leg Cranks as noted below:  
 Package A—3 cranks per leg/ total 6  
 Package B—4 cranks per leg/ total 8  
 Package C—5 cranks per leg/ total 10

Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and the rest evenly spaced between the two.

**DRAPER®**

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
 www.draperinc.com ■ fax 765-987-7142  
 Copyright © 2010 Draper Inc. Form FocalPoint\_72x96\_Assy10-R Printed in U.S.A.

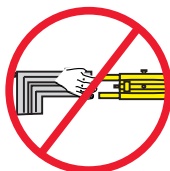

**⚠ Caution:**  
Beware of pinch points.

