


StageScreen Projection Screen by Draper—Leg "D" Assembly Map

For use with screen viewing area heights exceeding 13'7".

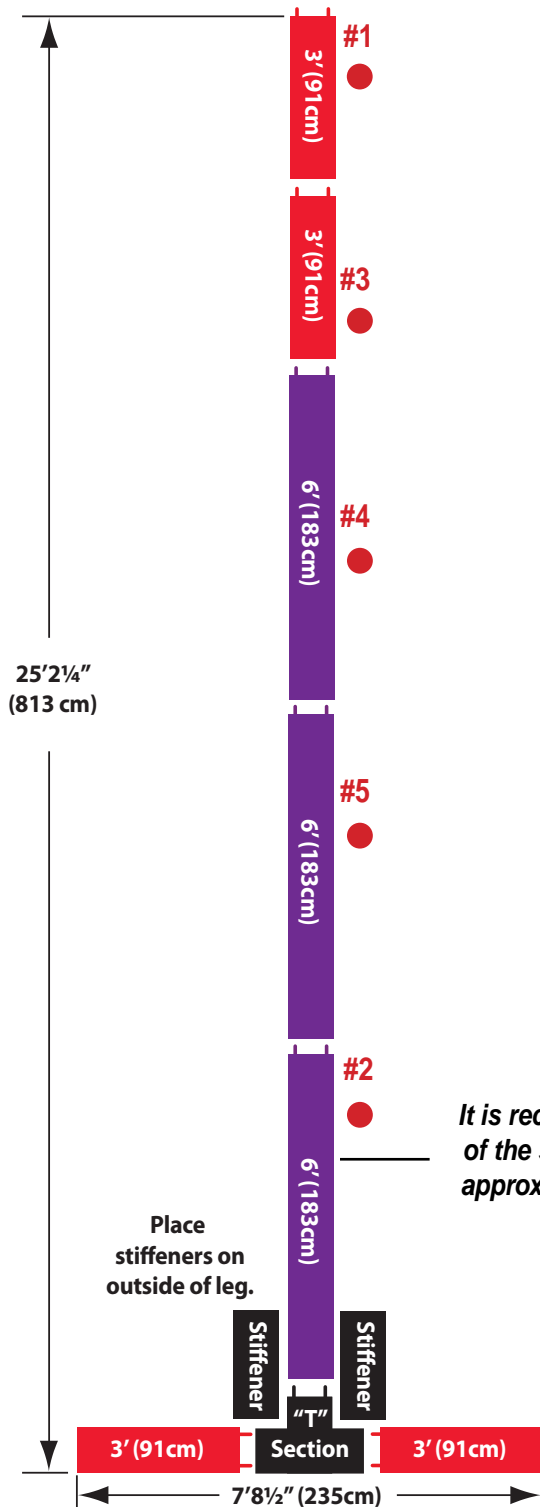

⚠ Before you start:

- Leg sections should be arranged so that:
 - Vertical guide pins point up.
 - Horizontal guide pins point toward T-section.

Red dots indicate recommended approximate points of attachment for leg clamps. Use the following rules for clamp placement:

- Clamp #1:** Attach within the top 6" of the leg.
- Clamp #2:** Attach as close to the bottom of the screen frame as possible (normally attaches to the corner section).
- Clamps #3, 4, 5:** Space the clamps equally between clamp #1 and #2.


Part Numbers
 383784—Silver
 383788—Black



⚠ Caution:
 Beware of pinch points.

It is recommended that the bottom of the screen frame be positioned approximately 40" above the floor.

Place stiffeners on outside of leg.

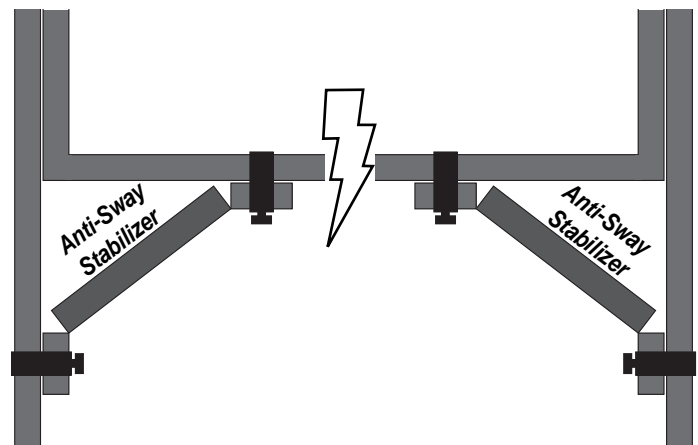

DRAPER®